 


FT004D-USB-BT

5.1Ch Remote Control Kit

User's manual

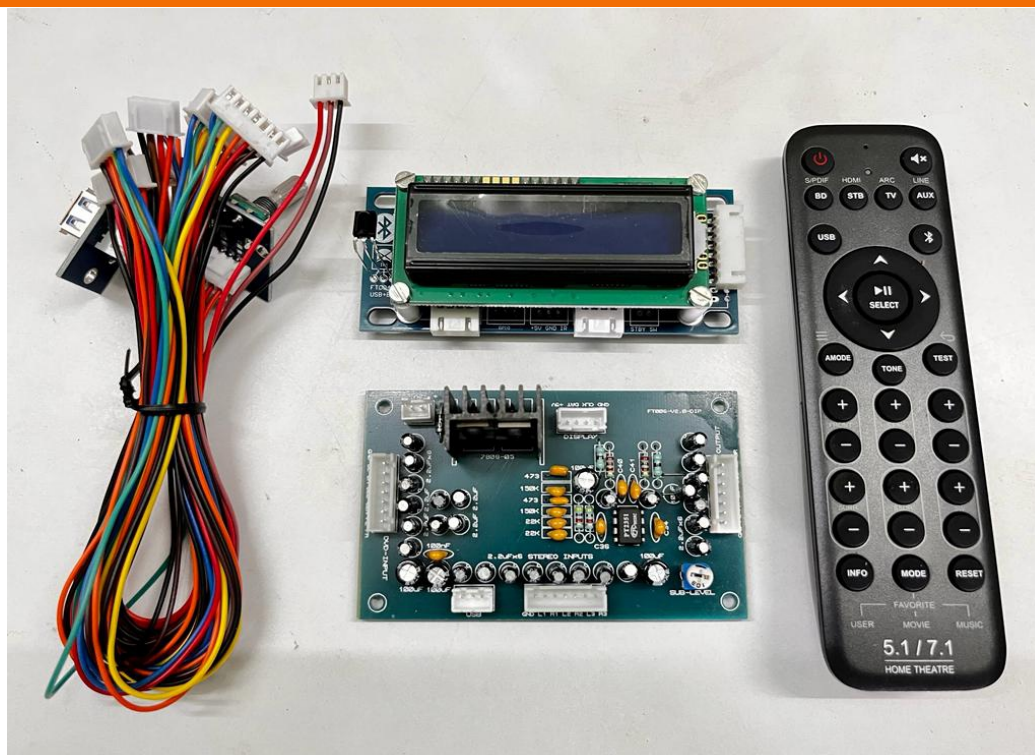

Features :

- 1) 6 channels independent electronic volume (0 to $-99\text{dB}/1\text{dBstep}$, $-\infty\text{dB}$),
- 2) 6 channels independent gain control (0 to $+14\text{dB}/2\text{dB step}$),
- 3) Bass: -14 to $+14\text{dB}(2\text{dB step})$,
- 4) Treble: -14 to $+14\text{dB}(2\text{dB step})$
- 5) 1 x 6Ch - DVD Input,
- 6) 3 x 2Ch - Stereo Inputs,
- 7) Built-in Low Pass Filter for Subwoofer Frequency,
- 8) Built-in Simulate Surround Sound,
- 10) Memory Function MOD1,MOD2,MOD3,
- 11) With Full Function Digital Rotary Encoder Support
- 12) User Changeable Welcome Display Name,
- 13) User Changeable Source Name,
- 14) User Changeable Key Assign,

USB AUDIO:

 
- 1) 24bit High Performance DAC
- 2) MP3 ,WAV , FLAC, WMA Format Support Through USB,
- 3) USB File Name & Folder Name Scrolling Display
- 4) USB Folder Next/PREV Support
- 5) USB Song Forward/Reverse Support

BLUETOOTH AUDIO:

- 1) Bluetooth Protocol V4.0
- 2) High Performance Low Latency A2DP
- 3) Bluetooth MP3 , AAC, SBC Support




1.0 AUDIO CONTROLLER BOARD

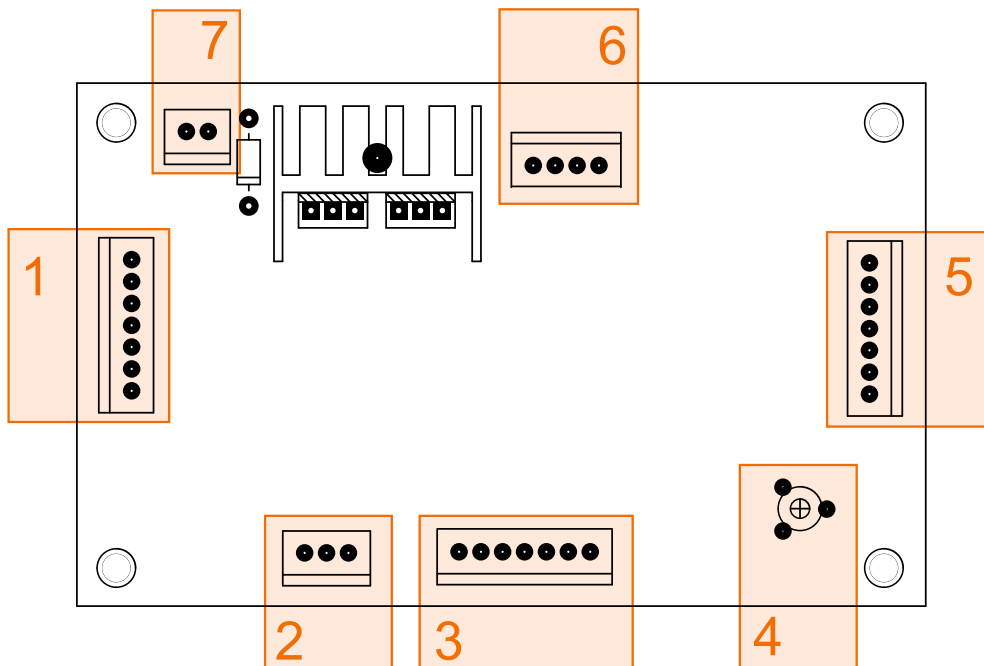

1. 5.1 multichannel input .
2. Usb/bluetooth (L/R) audio singal input from display unit .
3. 4 x stereo inputs (AUX) .
4. Sub-Woofer output level ctrl.
5. 5.1ch output to power amplifier
6. Communication from display unit .
7. Unregulated 12V- 15V Vdc single power supply .

 1.1 DISPLAY UNIT

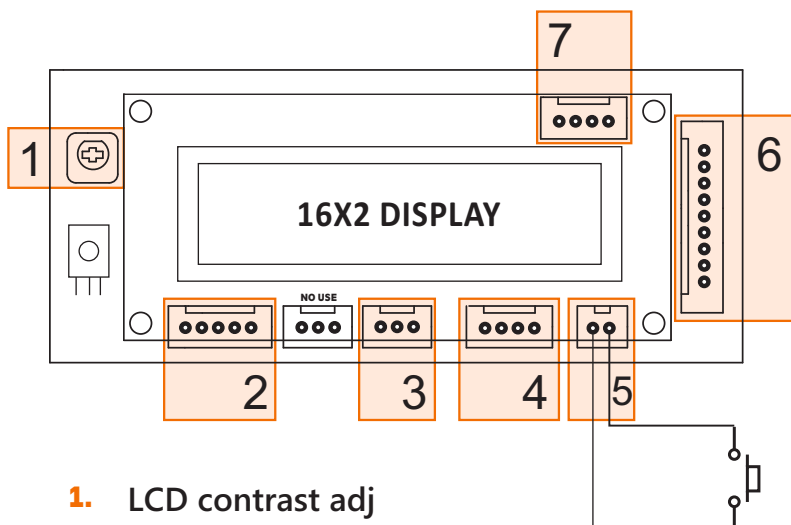

1. LCD contrast adj
2. Rotary encoder control input .
3. Infrared sensor input.
4. FT003 Control AB Output.
5. Standby Micro Switch Input
6. Communication to audio controller.
7. USB port input

FT004D-USB-BT

5.1Ch Remote Control Kit

User's manual

2.0 HOW TO GO ADVANCED SETTINGS

1. Hold AMODE Key

note : you can able to change pin number by **Advanced Setting -> System settings -> Change PIN**

2.1 HOW TO SET WELCOME NAME

1. Go system **Advanced Setting -> System settings -> Welcome Name Edit.**
2. D-PAD key to cursor navigation.
3. Type your letter or number hide keypad method . see figure 1
4. Hold button to change case and number
5. 0 button delete character .
6. 1 button to symbols.
7. Back button save welcome name.

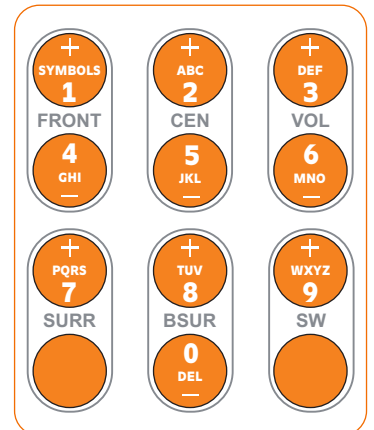 


figure 1

MULTI-TAP KEYPAD
LONG PRESS KEY TO CHANGE CASE AND NUM

2.2 HOW TO SET INPUTS DISPLAY NAME

1. Go system **Advanced Setting -> System Settings -> Inputs Edit.**
2. D-PAD - up/dn button to which input .
3. D-PAD - Right/left button to cursor navigation. .
4. Type your letter or number hide keypad method . see figure 1
5. Back button save inputs name edit.

note : 3 character only edit

2.2 HOW TO SET BLUETOOTH VISIBLE NAME

 
1. Go system **Advanced Setting -> System Settings -> BTname Edit**
2. D-PAD - Right/left button to cursor navigation. .
3. Type your letter or number hide keypad method . see figure 1
4. Back button save bluetooth name edit.

note : 16 character only edit

2.3 HOW TO SET KEY ASSIGN

1. Long Press Input Key from Remote or follow step 2 .
2. Go system **Advanced Setting -> System Settings -> Key Map Set .**
3. D-PAD - up/dn button to which key you want assign input .
4. D-PAD - Right/left button to assign which input you want that key.
5. Enter button to assign input .
6. Hold enter button to remove assigned input .
7. Back button to save.

note : you can able to assign per key 3 inputs .

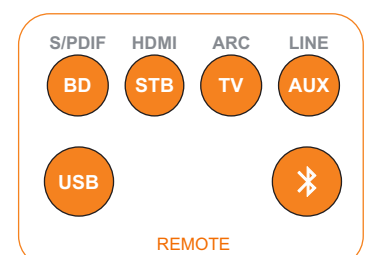

2.4 HOW TO SET AUDIO MODE MEMORY

Audio mode memory setting 2 type of method available.

1. user can be set audio mod memory by hold (mod 1 , mod2 , mod 3) button to memory
2. expert set by **Advanced setting -> Audio setup -> Modes Level** .

note : you can able to disable user set audio mod memory feature by

Advanced setting -> System setting -> General set -> Mode Lock = yes

1. **YES** = User mode lock enabled.
2. **NO** = User mode lock disabled.

2.5 HOW TO SET RESUME VOLUME TYPE

Resume volume set 3 type available

you can set resume type by **Advanced Setting -> Audio Setting -> General Set -> Boot Volm**

1. **RESM** = Resume last adjusted volume.
2. **DFLT** = Resume default reset volume
3. **MODE** = Resume last Mode (mod1 , mod2, mod3) volume .

2.6 HOW TO SET AUTO GAIN

Auto Gain is working principle in simple.

((47dB attenuation + 7dB Gain) 50dB Volume * 2dB per Step = Total 100dB) ,

you can enable/disable auto gain mode

Advanced Setting -> Audio Setting -> General Set -> Auto Gain

Once auto gain enabled , input gain not possible to set.

2.7 HOW TO SET BOOT STBY MODE

if you want poweron device will go standby mode set by

Advanced Setting -> System Setting -> General Set -> Boot St-by = YES

1. **YES** = Standby mode enabled.
2. **NO** = Standby mode disabled.